



CHEMIN'ARTE
CHEMINÉES & RADIATEURS DESIGN DÉCORATIFS

www.cheminarte.com

ELECTRIC HEATER INSTRUCTION MANUAL

Model: Vidrio Black and White ref 182/183



Electrical Parameter

- ◆ Power supply: AC220-240V
- ◆ Frequency: 50-60Hz
- ◆ Power: 2000W

NOTE: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Important

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION—Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.




Do not cover

WARNING: In order to avoid overheating, do not cover the heater.

Operating Instructions

Note: Ensure the circuit breakers for the power supply are turned on.

The heater controls are located right of the heater outlet.

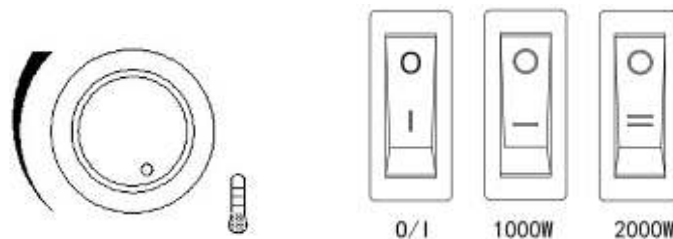

O/I: Press this switch for main power function. The heater is preset to start with flame effect. Press again will stop the main power function.

Once the heater is switched off, the unit will keep working with air flow for 60 more seconds.

1000W: For low heat function – Press this switch while the O/I switch is in the ON position. The heater will provide low heat level. Press once again to stop the low heat level function.

2000W: For high heat function – Press this switch while the O/I switch and the 1000W switch are in the ON position. The heater will provide high heat level. Press once again to stop the high heat level function.

Temperature Control: To adjust the temperature to your individual requirements, turn the temperature control dial to the right (clockwise) to increase the temperature and to the left (counter clockwise) to decrease the temperature. When desired ambient temperature is reached, the heater will automatically stop heating. When the ambient temperature drops below the desired temperature 2°C, the heater will resume heating.

Note: When the O/I switch is turned off, all other functions will stop even though the switches may be in the ON position.

Maintenance:

WARNING: Completely disconnect power before attempting any maintenance or cleaning, to reduce the risk of fire or electric shock. Maintenance should only be performed by a certified technician.

Cleaning:

Before cleaning any parts of the fireplace make sure to first turn off the controls and then unplug the unit from power source.

CAUTION: Wait until the unit has completely cooled before attempting any cleaning.

Cleaning Glass Panel: Remove dust with clean dry cloth. Remove fingerprints and other marks from glass door by using a clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces.

Metal and metal painted parts should be cleaned with clean damp cloth only. Do not use abrasive cleaners or spray liquids on these surfaces.

Information requirements for electric local space heaters

Model identifier(s): NDF-RO17W			
Item	Symbol	Value	unit
Heat output			
Nominal heat output	P_{nom}	2,0	kW
Minimum heat output (indicative)	P_{min}	0	kW
Maximum continuous heat output	$P_{max,c}$	2,0	kW
Auxiliary electricity consumption			
At nominal heat output	$e_{l,max}$	0	kW
At minimum heat output	$e_{l,min}$	0	kW
In standby mode	$e_{l,sb}$	0	kW
Type of heat input, for electric storage local space heaters only (select one)			
manual heat charge control, with integrated thermostat			[no]
Manual heat charge control with room and/or outdoor temperature feedback			[no]
Electronic heat charge control with room and/or outdoor temperature feedback			[no]
Fan assisted heat output			[no]
Type of heat output/room temperature control (select one)			
single stage heat output and no room temperature control			[no]
Two or more manual stages, no room temperature control			[no]
with mechanic thermostat room temperature control			[yes]
with electronic room temperature control			[no]
electronic room temperature control plus day timer			[no]
electronic room temperature control plus week timer			[no]
Other control options (multiple selections possible)			
room temperature control, with presence detection			[no]
room temperature control, with open window detection			[no]
with distance control option			[no]
with adaptive start control			[no]
with working time limitation			[no]
with black bulb sensor			[no]
Contact details:	www.cheminarte.com		