




CHEMIN'ARTE

CHEMINÉES & RADIATEURS DESIGN DÉCORATIFS

www.cheminarte.com

ELECTRIC HEATER INSTRUCTION MANUAL

Model: Lounge, Lounge 3XL and Ovalia ref 146/207/186/205

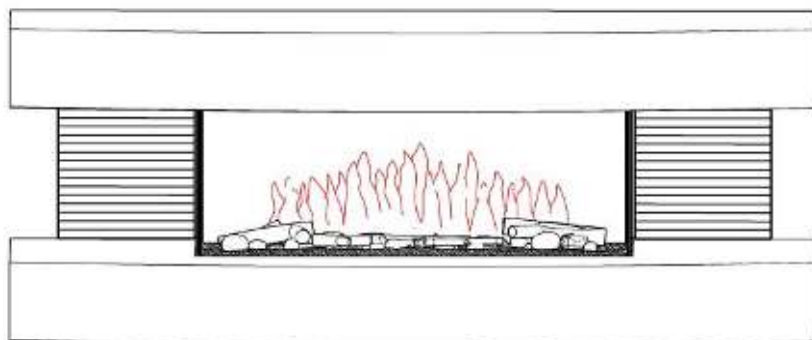

ATTENTION:

1. Find a location for the electric heater that is protected from direct sunlight.
2. Do not plug the electric heater into the power outlet before you read all instructions.

Important

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool
- Do not use this heater if it has been dropped;
- Do not use if there are visible signs of damage to the heater;
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- The heater must not be located immediately below a socket outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

NOTE: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

CAUTION—Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.




Do not cover

WARNING: In order to avoid overheating, do not cover the heater.

Electrical Parameter


- ◆ Power supply: AC220-240V
- ◆ Frequency: 50-60Hz
- ◆ Power: 2000W

Parts list

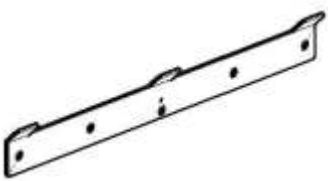REF NO	DESCRIPTION	QTY Lounge	QTY Lounge medium /Ovalia
A		5 PCS	3 PCS
B		5 PCS	3 PCS
C		1 PC	1 PC

Installation

Please be aware: that no products should be sealed against the wall/opening as this can effect the performance of the heater unit.

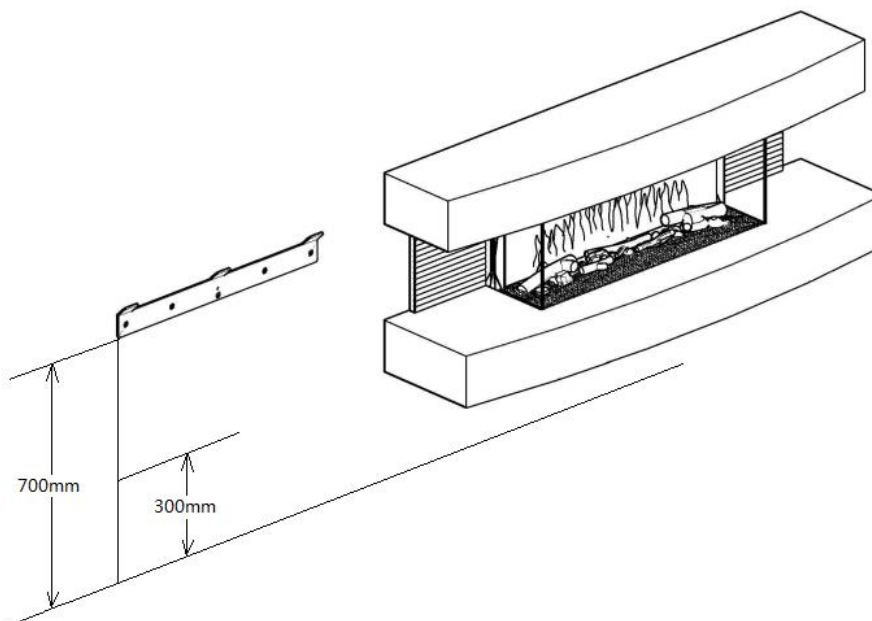

Minimum Installation Height:

From floor level to bottom edge of product, Minimum 300mm.

This suite is supplied with a wall fixing Bracket.

The suite can be installed at any height as long as it is not below the recommended 300mm. (Please note the 700mm measurement is given as a common installation height).

The recommended installation height is a minimum of 300mm from the floor level to the underside of the hearth.

Warning: Installing this product below 300mm will cause overheating issues.

The suite is designed as a wall mounted suite; it is not suitable to be installed at floor level.

Installation:

This model is provided with a wall mounting bracket along with x5 screws and wall plugs.

PLEASE NOTE: The screws and plugs provided are only suitable for a solid wall fixing.

If the installation is onto a hollow/stud wall, we recommend that heavy duty wall anchors or equivalent are used.

To install the product:


1. Measure 700mm from the floor level up the wall, Mark this measurement with a pencil.
2. Place the bottom edge of the wall bracket on the 700mm mark, level using a spirit level and mark and drill the x5 fixing holes.
3. Using the correct wall fixings screw and fix the wall bracket in place.
4. Locate the x5 slots in the rear of the product, carefully align these slots with the prongs on the wall bracket, lift and slot the product into place.
5. Locate the power cable socket on the bottom right hand side, underneath the hearth on the fire, and plug the power lead in.
6. The product is now ready to use.

Operating Instructions


Once the electric heater has been properly installed and connected to a ground electrical outlet, it is ready to operate.

Note: Ensure the circuit breakers for the power supply are turned on.

The heater controls are located right of the heater outlet.

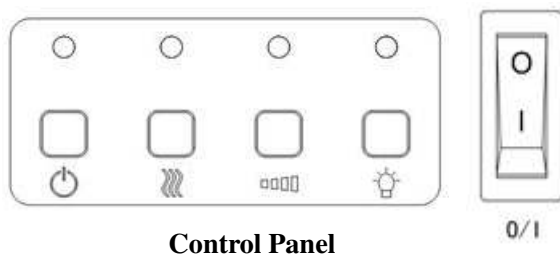

Control Panel

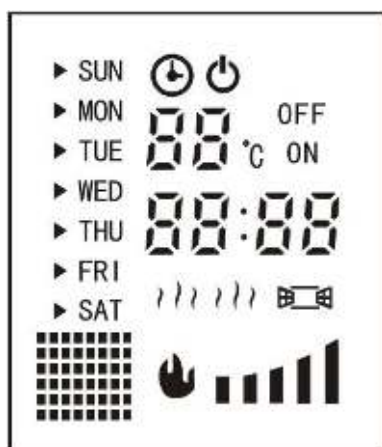

LED Screen



Remote Control

O/I: Press this switch, the unit power-on. When the O/I switch is turned off, all other functions will stop even though the buttons may be in the ON position.



: Press this button, the unit will enter standby mode. The indicator light will be on. Then you can select the following functions as desired. Press again to turn off the heater.



: For modification time function - Press this button, the 'SUN' on the LED screen starts to twinkle. Press up ↑ or down ↓ button to the desired date, and press + button to select, press - button to cancel. After set the desired date, press  button switch to the 'hour' position. Press + or - button to the desired hour. Press  button switch to the 'minute' position. Press + or - button to the desired minute. Press  or OK button to complete date setting.

NOTE: The date will be reset after power interrupt.



: For automatic working time setting function - There are 10 time periods you can set to make the unit work automatically. Press this button, time serial number starts to twinkle. The 'ON' on the LED screen lights up. Press + or - button to the desired serial number. Press  button again, the 'SUN' on the LED screen starts to twinkle. Press up ↑ or down ↓ button to the desired date, and press + button to select, press - button to cancel. After set the desired date, press  button switch to the 'hour' position. Press + or - button to the desired hour. Press  button switch to the 'minute' position. Press + or - button to the desired minute. At this time you have completed the boot time setting. Press  button again, the 'ON' extinguished and the 'OFF' lights up. Complete the shutdown time in the same way. Finally, you need to set a temperature which stop heating. Press + or - button to the desired temperature. When desired ambient temperature is reached, the heater will automatically stop heating.



: For Window detection function - Press this button to turn on the window detection function. During the heating process, if the room temperature drops obviously caused by the outdoor cold air blowing, such like open windows or open the door. In order to save energy, the heater will automatically stop heating. The corresponding icon on the screen will twinkle. Press again to turn off the window detection function to normally heating.



: For reset function - Press this button to clear the Timing parameters.



: For heat function - Press this button to turn on the heat function. Press again to turn off.



: For timer function - Press this button to turn on the timer function. Press again to turn off.

Note: the working state of the time period is the same as that before start timer function. That is to say, adjust the working state you want and turn on the timer function, then the machine will work according to your working state in the time period.



 
: For background light function – Press this button to turn on and turn off the background light

 : For flame effect function - Press this button to change flame effect. Press again to decrease the flame intensity. There are 4 light intensities for your selection. The flame optics will go lower under the sequence of 4,3,2 and 1. Pressing the button again will go higher under the sequence of 1,2,3 and 4. Press 3 seconds to change the flame color.

NOTE: After the display screen is extinguished, it can be activated by any key.

NOTE: In the absence of timing mode, you can press **+** or **-** button to the desired temperature directly. When desired ambient temperature is reached, the heater will automatically stop heating.

Fast Menu:

 : Press the standby button and the heating button, the unit can heating immediately.

Maintenance:

WARNING: Completely disconnect power before attempting any maintenance or cleaning, to reduce the risk of fire or electric shock. Maintenance should only be performed by a certified technician.

Cleaning:

Before cleaning any parts of the fireplace make sure to first turn off the controls and then unplug the unit from power source.

CAUTION: Wait until the unit has completely cooled before attempting any cleaning.

Cleaning Glass Panel: Remove dust with clean dry cloth. Remove fingerprints and other marks from glass door by using a clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces.

Metal and metal painted parts should be cleaned with clean damp cloth only. Do not use abrasive cleaners or spray liquids on these surfaces.

Information requirements for electric fixed local space heaters

Model identifier(s): 146/207/186/205/207				
Item	Symbol	Value	unit	
Heat output				
Nominal heat output	P_{nom}	2,0	kW	
Minimum heat output (indicative)	P_{min}	0	kW	
Maximum continuous heat output	$P_{max,c}$	2,0	kW	
Auxiliary electricity consumption				
At nominal heat output	$e_{l_{max}}$	0	kW	
At minimum heat output	$e_{l_{min}}$	0	kW	
In standby mode	$e_{l_{sb}}$	0	kW	
Contact details:	www.cheminarte.com			