CHEMIN'ARTE

CHEMINÉES & RADIATEURS DESIGN DÉCORATIFS

www.cheminarte.com

Installation & User Instructions

Electric Stove

Model Elsinki No 203

This product is only suitable for well insulated spaces or occasional use.

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

SAFETY INSTRUCTIONS

When using this electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to person, including the following:

- This heater must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.
- Do not switch the appliance on until it properly installed as described in this manual.
- The heater must not be located immediately below a socket outlet.
- Do not leave the appliance switched on when leaving your home or going to sleep.
- Do not leave unattended when plug in to the mains supply.
- This heater is not intended for use by children. Never leave unsupervised children where the heater is left switched ON (I) or unguarded.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- From time to time check the cord for damages. Never use the appliance if the cord or any part of the appliance shows any signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** IN ORDER TO AVOID OVERHEATING, Do not cover the heater.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Make sure the connection cord does not touch any hot surfaces.
- Keep the appliance at least 100cm (1.0m) from walls and any other combustible materials.
- Do not use the appliance outdoors
- Do not use if you have wet hands.
- Never move the appliance by pulling the cord.
- Before cleaning the appliance, make sure it is unplugged from the mains power and that it is completely cool
- Do not clean the appliance with abrasive or chemicals.
- Never use accessories that are not recommended or supplied by the manufacturer.
- Never route the mains cable beneath carpet.
- Never use aerosols or similar close to the heater.
- Never use the heater to dry clothes or any other similar items.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.
- This heater must not be used with an extension lead.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- **CAUTION**- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

PLACEMENT

This heater is designed to be placed on a hard, level surface. When positioning, please keep the following points in mind:

- If you are placing the heater in an alcove, make sure that there is at least 150mm of space on all sides to ensure good air circulation
- The heater must not be located over a fixed electrical socket. The socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance.
- Keep hearth rugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air from the fan and damage both soft furnishings and heater.

CONTROLS

Never cover the heater or obstruct the opening at the base of the heater, this could cause overheating and consequently risk of fire.

OPERATION INSTRUCTIONS

The following switches are located at the back of heater.

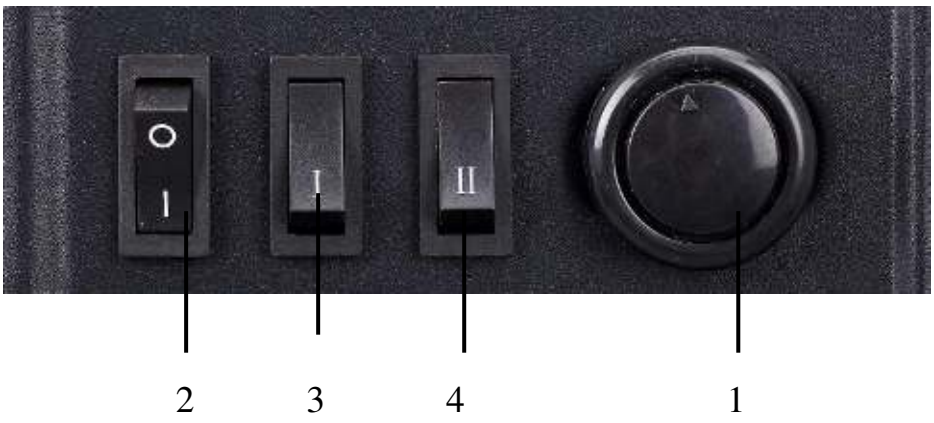

- Insert plug into mains socket
- Select the desired functions:
- Switch 2 (I) - Switches on/off electricity supply to the heater and flame effect
- **Note:** This switch must be in the ON (I) position for heater to operate with or without heat
- Switch 3 (I) - Switches on/off 1000W heat output
- Switch 4 (II) - Switches on/off 2000W heat output with switch 3.
- **Note:** The flame effect can be operated with or without heat
- Rotate thermostat knob (1) clockwise or anti-clockwise to increase or decrease desired room temperature setting.
- **NOTE:** The heater will only work if O/I switch (2) is ON and thermostat (1) is set above current room temperature.

SAFETY CUT-OFF

This appliance is fitted with a safety cut-off which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset.
To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

BULB REPLACEMENT

The bulb inside the heater is LEDs and not replaceable.

CLEANING AND CARE

- Before cleaning, always remove the plug from the electrical socket. Ensure that the unit is cool enough to work on.
- Do not use harsh chemicals or solvents to clean this product and avoid using abrasive cleaning agents.
- The heater and glass parts need only to be wiped clean with a dry, soft cloth; do not use polishes or abrasive materials.
- Do not immerse in water or any liquid when you clean it.
- Use a slightly damp, lint-free cloth to clean this appliance.

TROUBLE SHOOTING

No heat or light: Check the wall socket by plugging in a working appliance. If socket is functional, and the cord or plug of the heater is suspected to be faulty, have it checked by an electrician.

Light but no heat: Check that the Thermostat on the heater is set above the current room temperature. Alternatively, the thermal cut-off may have engaged - see thermal cut-off section.

SPECIFICATIONS

Voltage: 220-240V~ 50Hz

Power Consumption: 2000W

Bulb: LEDs

Model	203					
Item	Symbol	Value	Unit		Item	Unit
Heat output					**Type of heat input, for electric storage local space heaters only (select one)**	
Nominal heat output	P_{nom}	2	KW		manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	P_{min}	1	KW		manual heat charge control with room and/or outdoor temperature feedback	Not applicable
Maximum continuous heat output	$P_{max,c}$	2	KW		electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
Auxiliary electricity consumption					fan assisted heat output	Not applicable
At nominal heat output	el_{max}	0.013（fan motor）	KW		**Type of heat output/room temperature control (select one)**	
At minimum heat output	el_{min}	0.013 (fan motor)	KW		single stage heat output and no room temperature control	[no]
In standby mode	el_{SB}	0	KW		Two or more manual stages, no room temperature control	[no]
					with mechanic thermostat room temperature control	[yes]
					with electronic room temperature control	[no]
					electronic room temperature control plus day timer	[no]
					electronic room temperature control plus week timer	[no]
					Other control options (multiple selections possible)	
					room temperature control, with presence detection	[no]
					room temperature control, with open window detection	[no]
					with distance control option	[no]
					with adaptive start control	[no]
					with working time limitation	[no]
					with black bulb sensor	[no]
Contact details	www.cheminarte.com					

DISPOSAL INFORMATION

This making indicated that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the produce was purchased. They can take this product for environmental safe recycling.