CHEMIN'ARTE

CHEMINÉES & RADIATEURS DESIGN DÉCORATIFS

www.cheminarte.com

INSTALLATION AND USER INSTRUCTION GUIDE FOR OXFORD AND OXFORD XL ELECTRIC FIREPLACE

Read these instructions thoroughly before use and keep for future reference.

Important Safety Instructions

When using this appliance, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to person, including the following:

- This heater must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.
- Do not switch the appliance on until it properly installed as described in this manual.
- The heater must not be located immediately below a socket outlet.
- Do not leave the appliance switched on when leaving your home or going to sleep.
- Do not leave unattended when plug in to the mains supply.
- This heater is not intended for use by children.Never leave unsupervised children where the heater is left switched ON (I) or unguarded.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- From time to time check the cord for damages. Never use the appliance if the cord or any part of the appliance shows any signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** In order to avoid overheating, do not cover or obstruct the heater in any way.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Make sure the connection cord does not touch any hot surfaces.
- Keep the appliance at least 100cm (1.0m) from walls and any other combustible materials.
- Do not use the appliance outdoors
- Do not use if you have wet hands.
- Never move the appliance by pulling the cord.
- Before cleaning the appliance, make sure it is unplugged from the mains power and that it is completely cool
- Do not clean the appliance with abrasive or chemicals.
- Never use accessories that are not recommended or supplied by the manufacturer.
- Never route the mains cable beneath carpet.
- Never use aerosols or similar close to the heater.

- Never use the heater to dry clothes or any other similar items.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.
- This heater must not be used with an extension lead.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **CAUTION**- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Getting Started

- Remove the appliance from the box.
- Remove any packaging from the appliance.
- Place the packaging inside the box and either store or dispose of safely.

Contents of Carton

- Heater.
- Fixing bracket and screws
- Remote control.
- 1 Instruction Manual.

Helpful Advice before Fitting

- Please retain all packaging until you have checked and counted all the parts and the contents of the fixing pack against the parts list.

- The fixing pack contains small items which should be kept away from young children.

Installation Instructions (Oxford ref 118)

- Do not connect the appliance until the instructions are read carefully and the heater properly and securely installation.
- The minimum distances must be observed.
- Make sure the opening dimensions of mantel are at least 595mm width and 435mm height.
- Make sure the distance from the rear of heater to the wall is at least 100mm.
- Make sure the distances from the left, right and top of heater to the wall are at least 100mm.
- Inset the heater carefully into the opening of mantel.
- Fix the heater securely on the hearth by supplied bracket and screws (see Fig.1 in circle)

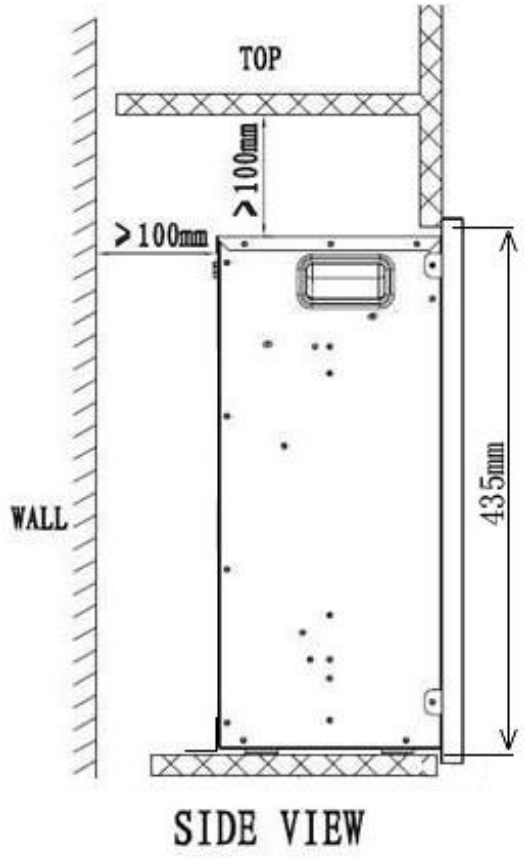

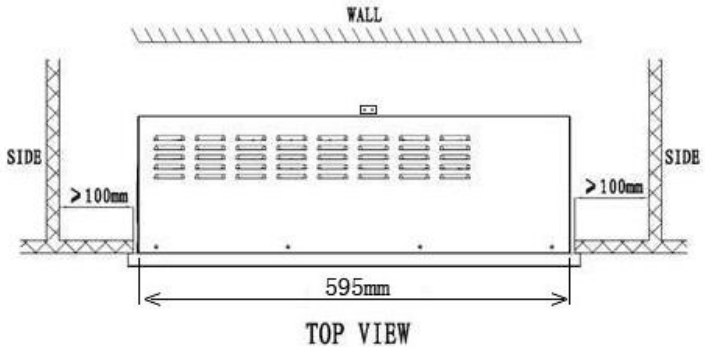

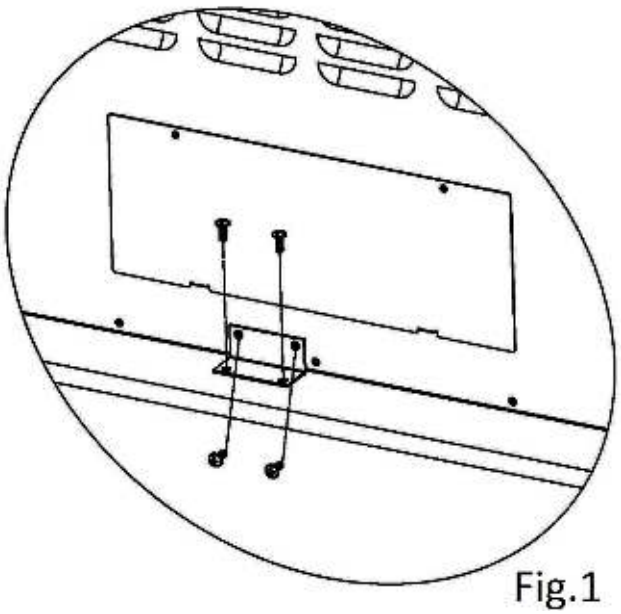

Fig.1

Installation Instructions (Oxford XL ref 204)

- Do not connect the appliance until the instructions are read carefully and the heater properly and securely installation.
- The minimum distances must be observed.
- Make sure the opening dimensions of mantel are at least 747mm width and 528mm height.
- Make sure the distance from the rear of heater to the wall is at least 100mm.
- Make sure the distances from the left, right and top of heater to the wall are at least 100mm.
- Inset the heater carefully into the opening of mantel.
- Fix the heater securely on the hearth by supplied bracket and screws (see Fig.1 in circle)

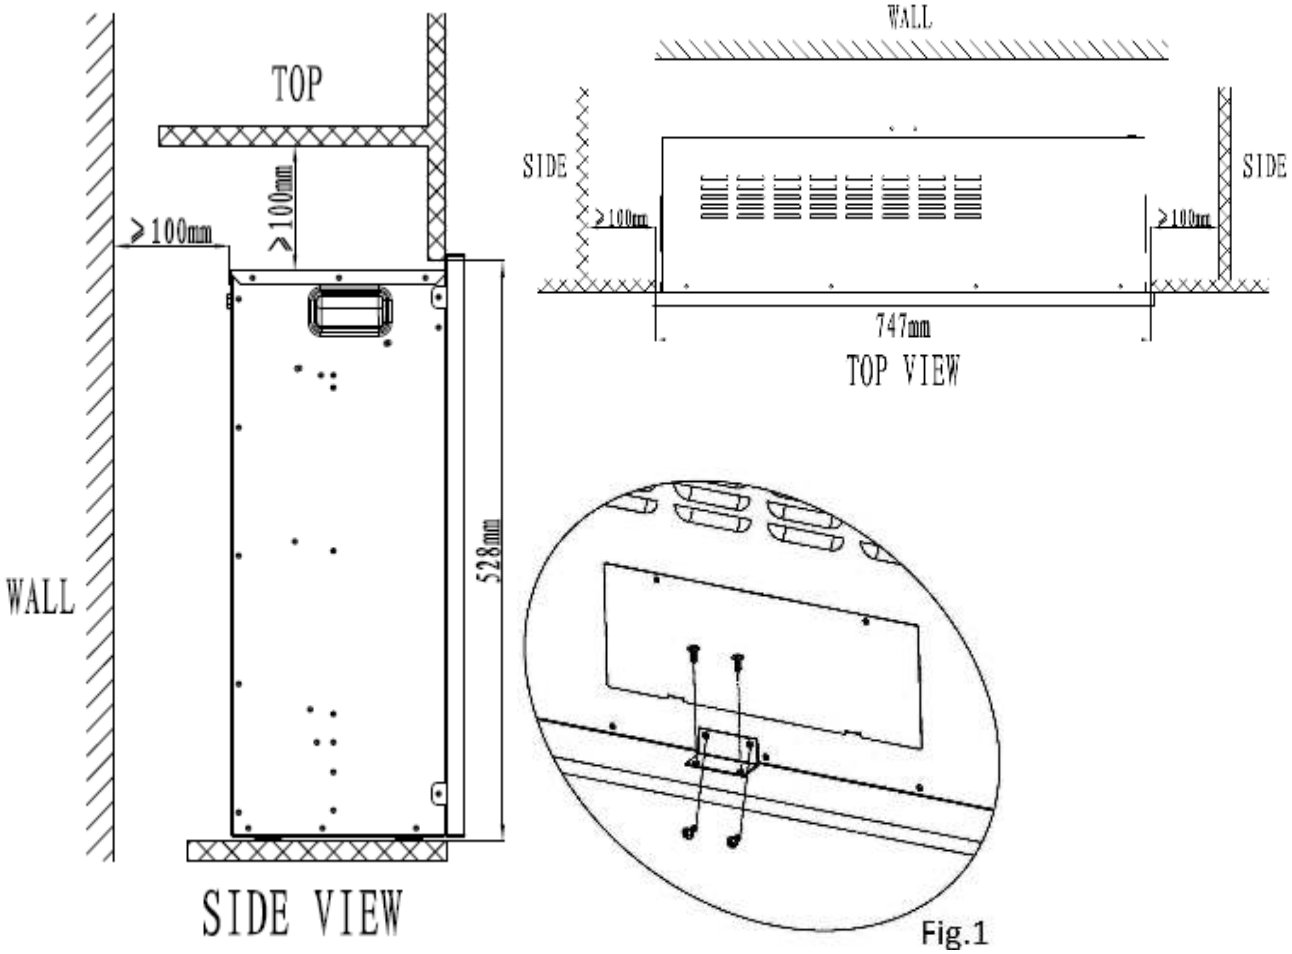

Fig.1

Operation Instructions

- **The Controls**
  - **Switching ON/OFF**
    - Use the ON/OFF switch to power on the heater (set it to standby mode).
    - In standby mode, the heater can be operated either manually by the switches located at the front and right hand side of heater or by the supplied remote control.
  - **Manual Operation**
    - **NOTE:** The heater only starts working if the set temperature is higher than the ambient room temperature.

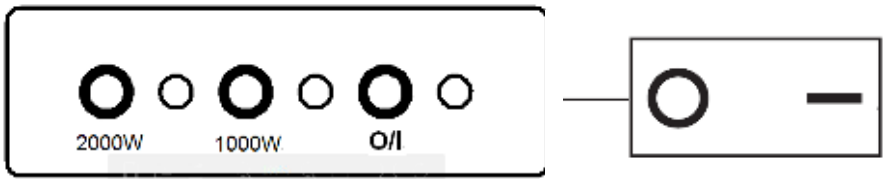

	O	Heater powered off
	–	Heater powered on, set to standby mode
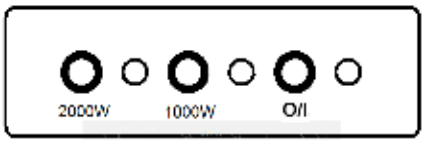	I/O	– Press to switch the flame effect ON/OFF – Press and hold to toggle between 5 different flame dim levels
	1000W	Press to activate low level heating(1000W)
	2000W	Press to activate high level heating(2000W)

  - **Remote Operation**
    - **NOTE:** The heater should be powered on using the ON/OFF switch before it can be operated using remote control.

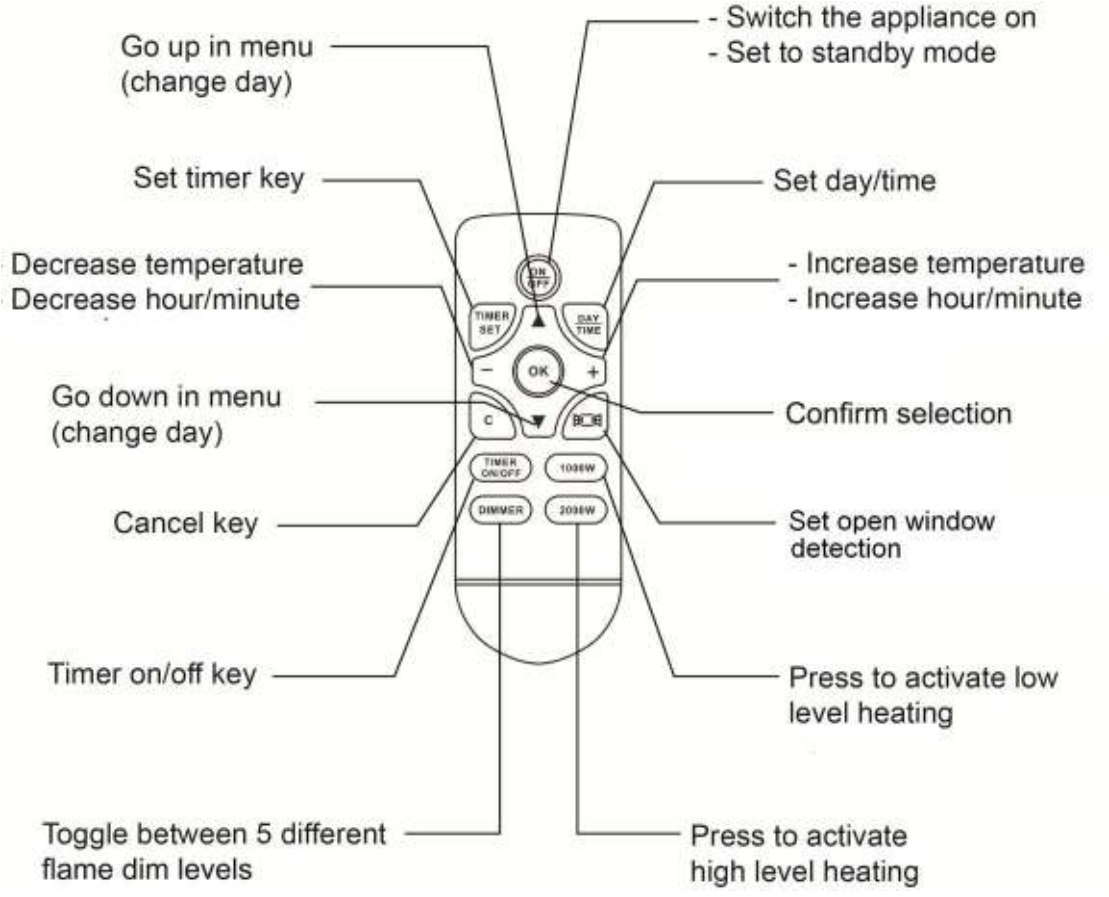

- The remote control requires 2xAAA size batteries (Not included).
- Open the battery compartment by sliding the cover down and insert the batteries noting the polarity indicated in the battery compartment.
- Keep batteries out of reach of children.
- Remote control operations are identical to the functions on the control panel.
- The remote control must be point directly at the sensor on control pad.

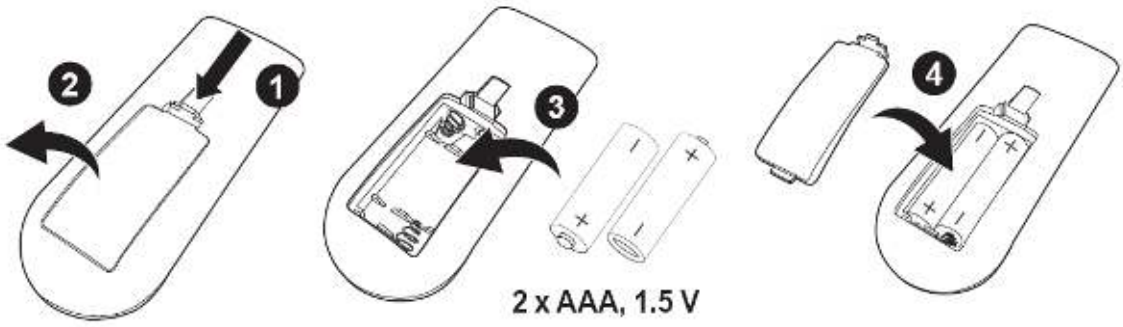

➢ **Display**

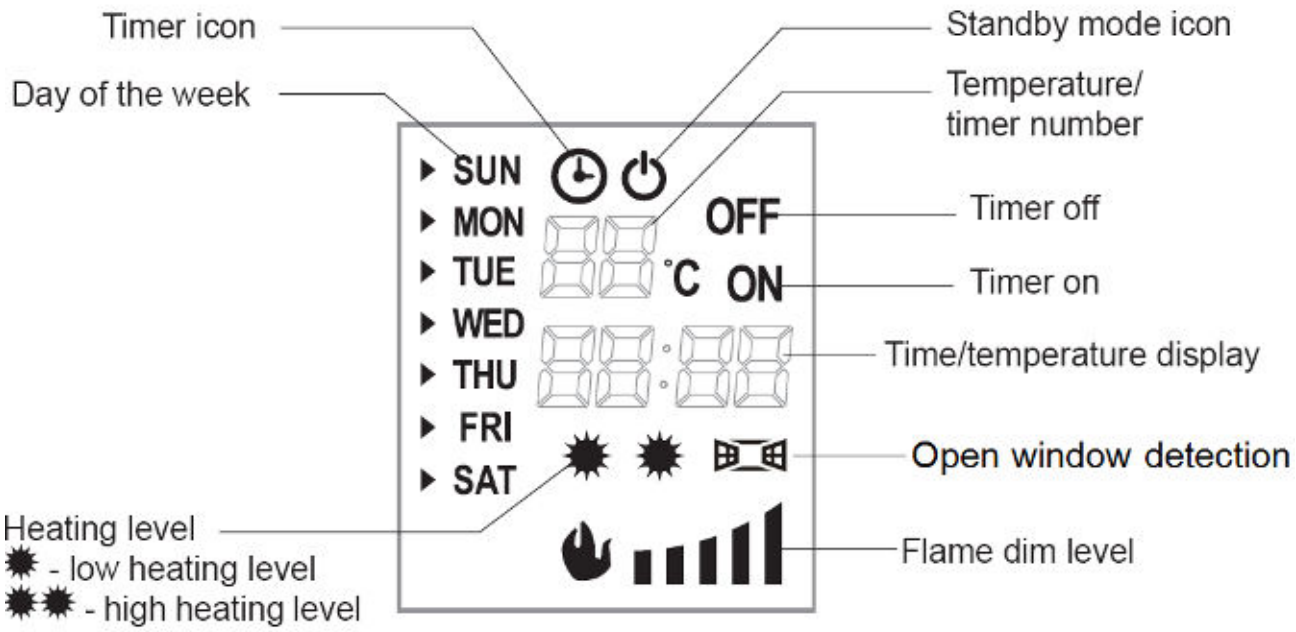

➢ **Settings**

▪ **Setting weekday and time**

- Press the DATE/TIME key. When the day is flashing press the ▲ or ▼ key to select the day.
- Press the DATE/TIME key again, then press the + or – key to set the hour.
- Press the DATE/TIME key again, then press the + or – key to set the minute.
- Press the OK key to confirm the setting.

▪ **Setting temperature**

- **NOTE:** This setting is only applicable for the temperature in standard heating mode, not for the temperature in the timer mode. The default set temperature is 20℃.
- **NOTE:** The heater only starts working when the set temperature is higher than the room temperature.
- Press the + or – key to set the temperature, which ranges from 15 to 30℃.
- After the temperature setting has been completed, the display flashes about 5 seconds, then shows the room temperature.

▪ **Setting timer**

- Up to 9 different timer settings can be programmed.
- Each timer setting has its day, power-on time and power-off time.
- The maximum duration of each timer setting is 23 hours 50 minutes.
- If the power-off time of the timer setting falls on the following day, it is unnecessary to set the day-just set the power-off time.
- Press the TIMER SET key, the timer number starts blinking (01-9).
- Press the + or – key to select a timer number.
- Press the TIMER SET key, the cursor on the left side of the day blinks.
- Press the ▲ or ▼ key to move the cursor to the corresponding day. Press the + key to add a corresponding day, or press the - key to delete a day.

- Press the TIMER SET key to set the on time. The hour digit starts blinking.
- Press the + or – key to set the hour.
- Press the TIMER SET key. The minute digit starts blinking.
- Press the + or – key to set the minute.
- Press the TIMER SET key to set the off time. The hour digit starts blinking.
- Press the + or – key to set the hour.
- Press the TIMER SET key. The minute digit starts blinking.
- Press the + or – key to set the minute.
- Press the TIMER SET key. The temperature digit starts blinking.
- Press the + or – key to set the temperature.
- Press the TIMER SET key to continue with the timer setting or press the OK key to confirm the setting.

▪ **Viewing the timer setting**

- Press the TIMER SET key.
- Press the + or – key to check the power-on time of the set timers one by one.
- To check the power-off time, press the ▲ key.
- Press the + or – key to check the power-off time of the set timers one by one.
- To delete selected setting, press the C key.

▪ **Activation timer**

- Press the TIMER ON/OFF key to activate the timer function.
- **NOTE:** When the timer is active, the heating level must be manually selected. If the heater function is not selected; only the flame effect goes on at the set power-on time.

▪ **Open window detection**

- Press the key to activate open window detection function. The icon appears on the display.
- The icon on the display starts blinking and the heater stops heating if room temperature drops quickly. Press the key again to cancel open window detection.
- **NOTE:** Open window detection does not work if you have not turned heating on.

Maintenance

- **WARNING**: Before any maintenance and/or cleaning the exterior of the heater, disconnect the heater form the power supply and leave heater cooled off.
- The heater uses an electronically controlled LED system to create the flame effect therefore no parts need to be replaced. Under no circumstances should the heater be serviced by anyone other than a qualified electrician.

Safety Cut-out

- This heater is fitted with a safety cut-out which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset.

- To reset the heater, disconnect the heater from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the heater.

Care and Cleaning

- Always disconnect the heater from mains supply and allow cooling before any cleaning operation.
- Trim parts may be cleaned using a clean, damp cloth. Never use abrasive cleaners and chemical agents as damage may occur to the finish.

Technical Specification

- Supply: 220-240V~ 50Hz
- Rated power: 2000W
- Lighting: LEDs

General Information

Model	**Oxford 118 and Oxford XL 204**					
Item	**Symbol**	**Value**	**Unit**		**Item**	**Unit**
Heat output					**Type of heat input, for electric storage local space heaters only (select one)**	
Nominal heat output	P_{nom}	2.0	KW		manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	P_{min}	0.0	KW		manual heat charge control with room and/or outdoor temperature feedback	Not applicable

Maximum continuous heat output	$P_{max,c}$	2.0	KW		electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
Auxiliary electricity consumption					fan assisted heat output	Not applicable
At nominal heat output	el_{max}	0.000	KW		**Type of heat output/room temperature control (select one)**	
At minimum heat output	el_{min}	0.000	KW		single stage heat output and no room temperature control	[no]
In standby mode	el_{SB}	0.000	W		Two or more manual stages, no room temperature control	[no]
					with mechanic thermostat room temperature control	[no]
					with electronic room temperature control	[no]
					electronic room temperature control plus day timer	[no]
					electronic room temperature control plus week timer	[yes]
					Other control options (multiple selections possible)	
					room temperature control, with presence detection	[no]
					room temperature control, with open window detection	[yes]
					with distance control option	[no]
					with adaptive start control	[no]
					with working time limitation	[no]
					with black bulb sensor	[no]
Contact details	www.cheminarte.com					

Disposal Information

This making indicated that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the produce was purchased. They can take this product for environmental safe recycling.